

InformaCast Emergency Notification Settings

DialCast

Dial phone code in the format: 505#[BLDG NUM]

Message

Alert - [BLDG] Lockdown Message

Recipient Groups

- [BLDG] - Lenel Panel On → Trigger Lenel relay on Barix
- [BLDG] - Fire Panel On → Trigger Fire panel relay on Barix
- [BLDG] - All → Send alert to all building phones and speakers
 - Includes [BLDG] - Mobile → Send alert building administrative staff
- Admin - SRO Mobile → Send alert to district administrative staff and SRO

M2M Contact Closures

Lenel Input triggered on Barix relay

IP Address for Barix relays

Input Ports

[BLDG] Lenel Input - This is triggered from the Lenel panel relay

Message

Alert - [BLDG] Lockdown Message

Recipient Groups

- [BLDG] - Fire Panel On → Trigger Fire panel relay on Barix
- [BLDG] - All → Send alert to all building phones and speakers
 - Includes [BLDG] - Mobile → Send alert building administrative staff
- Admin - SRO Mobile → Send alert to district administrative staff and SRO

Note: Do not include the "Lenel Panel On" relay because that is where the lockdown originated

Configure Output Ports for various relays

- Relay 1 - Always Lenel Panel
- Relay 2 - Always Fire Panel
- Relay 3 - Available
- Relay 4 - Available

A Barix relay might be setup just to control other devices like security curtains and not need a Lenel or Fire Panel configured.

Revision #2

Created 12 July 2022 11:16:27 by Daniel Hubbell

Updated 16 November 2022 12:34:14 by Daniel Hubbell